



# ACQUA FLAT INSTALLATION CHART

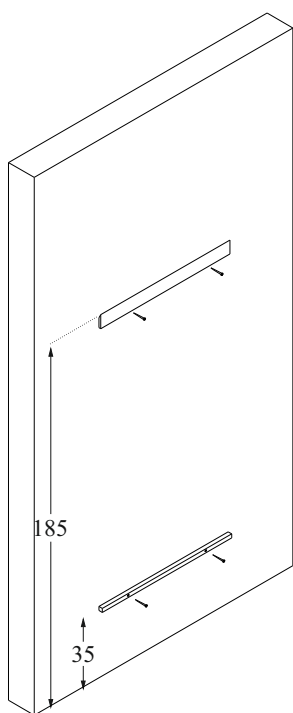


1

Carrier is mounted on the wall with specified dimension

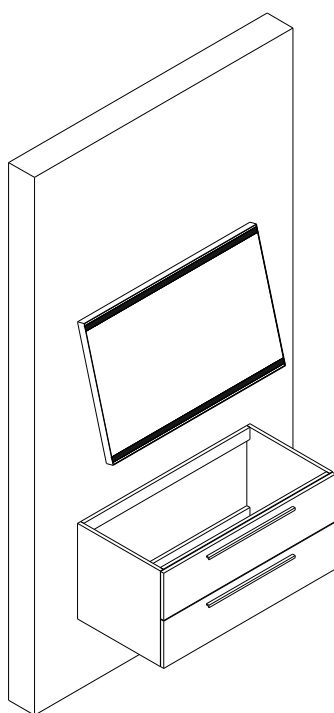


2

Hang the upper unit and sink cabinet

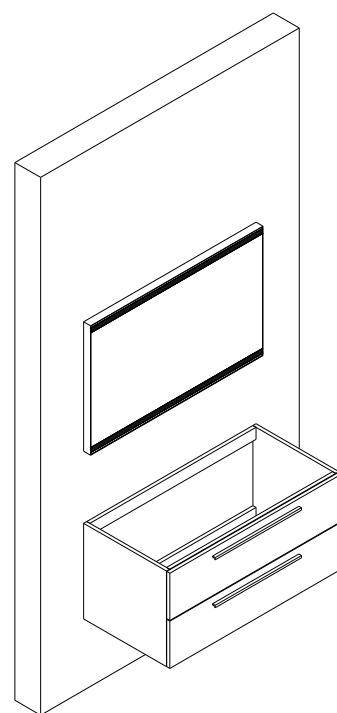


3

Place the cabinet to wall as balanced.  
Install the iron hanger to the wall and cabinet to make the cabinet fix.

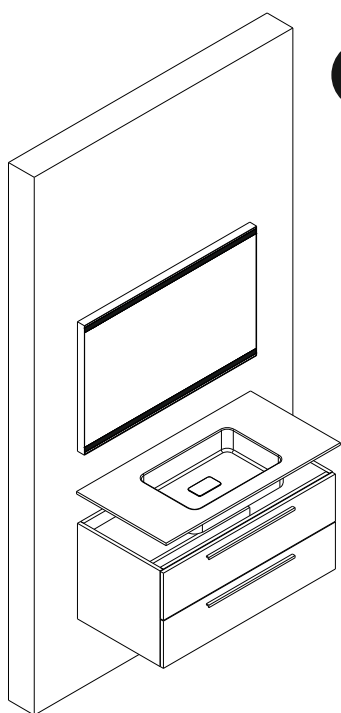


4

Get the countertop and place it on the cabinet.

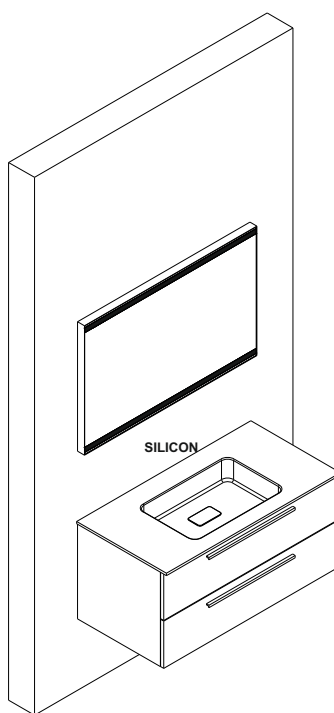

5

Fill up silicon between the bench and well.

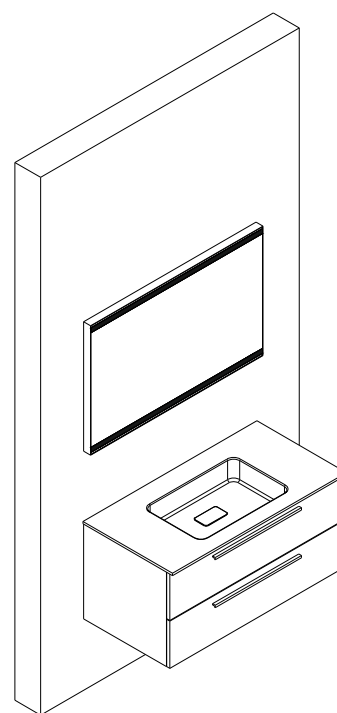

6

**ArmadiArt**